

Assembly Instructions



Rocket Riser[®] RS450/550/750/760

Tools you will need:

Large Philips Screwdriver
Small Philips Screwdriver
(6) 2" Wood Screws (included)
(6) 1.25" Machine Screws (included)

STEP 1: Remove all packing material from included (4) Riser platforms.

STEP 2: With small Philips head screwdriver, attach the included 2" dowels to *small* Riser (top) platforms using (3) 2" wood screws. Angled dowel forms the *front* Riser support, straight dowels form *rear* Riser supports. See Figure 1.1.

NOTE: Angled dowel should "point" forward when right-side up. See Figure 1.2.

Figure 1.1


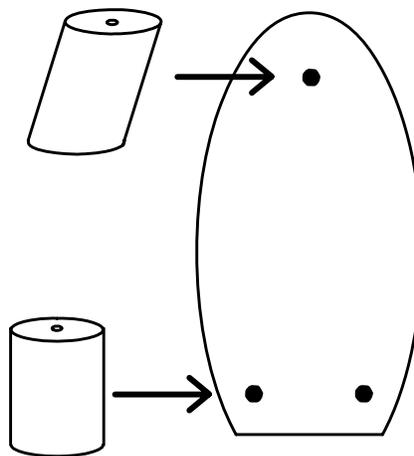


Figure 1.2

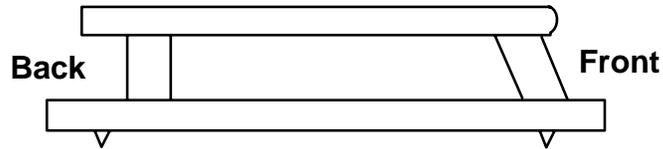

**Remove spiked feet from RS 550/750 base before proceeding.

STEP 3: Using large Philips head screw driver, attach small Riser platform to base of RS 750 using included 1.25" machine screws. Machine screws will drill directly into threaded inserts on RS 550/750 bottom.

STEP 4: Using remaining wood screws, from the underside up, screw large (bottom) Riser base into pre-drilled holes in base of 2" dowels.

STEP 5: Insert spiked feet into threaded inserts on underside of large Riser base, and stand speaker upright. NOTE: Spikes are to be used ONLY in low traffic areas where speakers will not be touched. Using spiked feet will significantly reduce the stability of your speakers. If placed in high traffic areas, or if in danger of being inadvertently bumped (pets, small children, etc.), do not use the spikes.

STEP 6: Sit down and listen!

***Should you need any further technical assistance, please contact our support department at support@av123.com or 1-877-543-7500 option 2.*